

VRISIMO
Equipment Company®

www.vrisimo.com

**900 Series
Shredder
Owner's Manual**



Delivery Report Form

Prior to acceptance of the equipment, thoroughly check and mark off the items outlined in the delivery checklist below with your sales representative. Make sure you fully understand the operation, adjustment and safety rules as outlined in the operator's manual. The sales representative is responsible for going over this form with the owner and operator of this attachment. This form also serves as your warranty registration. Fax to 209-882-9001.

Customer Information

Last Name		Street Address	
City	State	Zip	

Attachment Information

Model	Serial Number
-------	---------------

Dealer Information

Company Name		Sales Rep. Name	
Company Street Address	City	State	Zip

- Check to make sure attachment is completely lubricated.
- Buyer is shown all grease fittings and proper gear oil height.
- Oil in Gearbox checked for proper level and weight.
- All bolts checked for tightness.
- All hitch pins and retainer bolts in place.
- All knives and linkages in place.
- All shields in place.
- Belts checked for proper adjustment.
- PTO shaft checked for proper length.
- Procedures for attaching mower/shredder to tractor demonstrated to end user.
- Starting procedures explained to end user.
- Operation guidelines as outlined in owner's manual explained to end user.
- Adjustment of cutting height, belts and mower height explained to end user.
- Replacement of mower/shredder knives explained to owner.
- Lubrication points shown to end user.
- ALL safety precautions thoroughly read and understood.
-

The signatures below indicate that both the sales representative and the end user have gone over the above checklist and all topics have been covered thoroughly.

Buyer Signature _____ Date _____

Sales Rep. Signature _____ Date _____

Fax this completed form to 209-882-9001

Table of Contents

Introduction

Thank You	1
Warranty Information	2

Safety

Safety Procedures	3
Maintenance Safety	5

Basic Operation

Attaching to Tractor	6
Starting Procedure	7
Running Your Shredder	8

Adjustments and Maintenance

Lubrication	9
Cutting Height and Belt Adjustment	10
Replacing the Knives	11
Cleaning Your Shredder	12
Transport, Removal and Storage	13
Frequently Asked Questions	14

Parts Catalog

Shredder Information	16
Top Shaft Assembly	17
Pulley Assembly	18
Cutter Drum Assembly	19
Rear Wheel Assembly	20
Miscellaneous	21

Thank You

Dear Customer,

Thank you for purchasing a **VRISIMO Flail Shredder**. This manual has been prepared to acquaint you with the operation, adjustment and maintenance of your new shredder. It was carefully designed and manufactured under the highest industrial standards to give you years of dependable service. Read this Operator Manual carefully and fully understand the operation of the machine before attempting to operate it. Each section has been clearly identified so you can find the information you need. Vrisimo Equipment Company reserves the right to make changes in design and specifications, and/or to make additions to or improvements in its product without imposing any obligation upon itself to install them on its products previously manufactured. If at any time you require additional information, consult your authorized Vrisimo dealer or the customer service department.

ATTENTION

The safety of the operator was one of the primary concerns of **Vrisimo Equipment** when designing this shredder. Shielding, simple adjustments and other safety features were built into this shredder whenever possible. You can make your home, orchard or farm a safer place to live and work if you observe the precautions following this message. Be sure you and the people working for you read and understand them. All machinery should be operated only by responsible persons who have been trained to operate them in a safe manner.



Vrisimo Equipment Company
P.O. Box 220 - 2507 Tully Rd.
Hughson, CA 95326
Phone: (800) 426-5615 Fax: (209) 882-9001

Vrisimo Equipment Company is solely owned by Valley Tool and Manufacturing. Vrisimo mowers and shredders have been built continuously for forty years and at the Hughson facility for the past 25 years. Our product is the industry standard for flail mowing. Let us build one for you!

Have industrial applications? Own a skid steer or mini excavator? Visit www.rockhound.com to see Valley Tool's industrial line of attachments.

Important to Purchaser

Customer Ownership Registration

Prior to acceptance of the equipment, thoroughly check off the pre-delivery checklist with the sales representative. Be sure you fully understand the operation, adjustment and safety rules as outlined in this manual.

Delivery Checklist

- Check to make sure mower/shredder is lubricated.
- Buyer is shown all grease fittings and proper gear oil height.
- Oil in gearbox checked for proper level and weight.
- All bolts checked for tightness
- All hitch pins and retainer bolts in place.
- All knives and linkages in place.
- All shields in place.
- Belts checked for proper adjustment.
- PTO shaft checked for proper length.
- Procedures for attaching mower/shredder to tractor demonstrated to end user.
- Starting procedures explained to end user.
- Operation guidelines as outlined in owner's manual explained to end user.
- Adjustment of cutting height, belts and mower height explained to end user.
- Replacement of mower/shredder knives explained to owner.
- Lubrication points shown to end user.
- ALL safety precautions thoroughly read and understood.

Warranty

Vrisimo Equipment guarantees the Vrisimo Flail to be free from defect in material and workmanship for a period of six months dating from delivery to the original user. The obligation under this warranty, statutory or otherwise, is limited to the replacement and/or repair at your authorized Vrisimo dealer of such part or parts as shall appear to us, upon inspection, to have been defective in material or workmanship and not altered in any way by the customer or other parties.

This warranty shall not apply to vendor warranted PTO items such as bearings, belts, PTO shafts and gearboxes or other parts not manufactured by Vrisimo Equipment. Such being subject to the warranty of their respective manufacturers.

No expressed, implied or statutory warranty other than herein set forth is made or authorized to be made by us. Vrisimo Equipment shall not be liable for consequential damages of any kind, including but not limited to: consequential labor costs or transportation charges in connection with the replacement or repair of defective parts, lost time or expense which may have accrued because of said defects.

Vrisimo reserves the right to make changes in its products at any time and without prior notice. When such changes are made, neither Vrisimo Equipment nor its dealers assume any obligation to make these changes in products previously manufactured.

Safety

Failure to heed these warnings may result in personal injury or death.

- Before operating this machinery, read the owner's manual carefully.

- Use eye, ear and head protection to protect the operator from any flying debris and noise



- Use a backboard made of plywood or similar material behind the tractor seat for added driver protection. Because of the wide variety of tractors used with the Vrisimo mowers/shredders, it is the purchaser's responsibility to insure that a backboard is constructed and installed on each tractor being used to run the mower/shredder. The use of this shredder without a backboard installed on the tractor can result in serious personal injury or death from debris that might be discharged or thrown from the mower/shredder unit.

- All personnel except tractor driver should be 100 feet clear of machinery before starting or operating it.

- Never use drugs or alcohol before or while operating your mower/shredder.



- Be aware that driving a tractor for an extended period of time can result in fatigue or boredom and may cause the operator to lose awareness of what he/she is doing. It is recommended that scheduled work breaks be taken to avoid this.

- Keep hands and loose clothing away from any power driven parts.

- Avoid contact with hot surfaces including pumps, motors, hydraulic oil tanks and hose connections.

- Do not operate this machine without all guards being in good condition and firmly in place.

- Do not operate this machine on a tractor that is not properly maintained. If a tractor control failure should occur while operating this machine, immediately shut down the tractor and perform repairs before continuing.

Safety (cont.)

- Stop the operation of this machine when people or vehicle driver's vision becomes obscured, caused by the discharge of materials and dust. Also avoid operating this machinery in unusually foggy conditions or at night.
- Never leave the mower/shredder unattended while it is in the lifted position.
- Keep away from rotating elements to prevent entanglement.



- Do not let the mower blades turn while the mower deck is raised for any reason.
- Use flashing warning lights when operating on highways, except when prohibited by law.
- Be aware that the mower/shredder may be wider than the tractor, and caution should be used to avoid clipping or running over trees, signs or posts that may be in the way of the mower/shredder.
- Never allow children or other persons to ride on the mower.



- Mow at a speed you can safely operate the tractor and mower. Normal ground speed ranges from 0-5 miles per hour. Use slow mowing speeds when operating on or near slopes, ditches, drop-offs, or when debris and foreign objects are to be avoided.
- Use the following guidelines to reduce the risk of equipment and grass fires:
 - Do not smoke or have an open flame near the tractor or mower.
 - Do not drive into burning areas or areas that have been freshly burned.
 - Insure slip clutches are properly adjusted to prevent excessive slipping.
 - DO NOT allow clippings or debris to collect near drivelines, slip clutches and gear-boxes. Check the mower deck periodically and clear out any clippings and collected debris.
- Do not turn so sharp or lift the mower so high that the driveline produces a severe knocking. This will cause accelerated wear and eventually the destruction of drive train components.

Maintenance Safety

- Be sure to inspect all safety devices (including safety shields, guards, deflectors, etc.) before each use.

Safety Shield Examples




- Maintain all safety decals and make sure they are visible to the operator.
- Replace bent or broken blades with new ones. DO NOT attempt to weld or bend damaged blades. This can cause cracking or other types of damage that could result in the blade being thrown from the mower.
- Wear gloves and exercise care when handling mower blades/knives. Also be alert to worn or damaged surfaces that could have sharp edges.
- Disengage PTO and shut off engine allowing all movement to stop before leaving the operator's position to adjust, clean, lubricate or unplug the machine.
- Replace rubber guard on the front of the mower/shredder if torn, frayed, punctured, or worn before operating this equipment.
- Before working on or underneath the mower/shredder, place blocks on both sides (front and back) of tractor tires and under each end of the mower to prevent accidental lowering of the machine. Also remove the ignition key from the tractor and allow all movement to stop before beginning work.

Basic Operation

Attaching to Tractor

The Vrisimo flail can be hooked up to any tractor with a drawbar. This shredder, unlike our others, is a pull-behind instead of 3-point mounted.

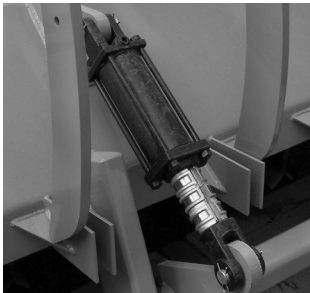

1. Set tractor drawbar in the extended position to accommodate the driveline.
2. Attach shredder drawbar to tractor drawbar, rotating to whichever position best allows the shredder to run in a level position. If level shredder position cannot be achieved by drawbar position, consult Adjustments and Maintenance Section for further information.
3. Install PTO driveline with friction clutch end toward shredder. Be sure the tractor drawbar is in the extended position, keeping the pivot point approximately 14 inches to the rear of the tractor PTO output shaft.
4. Pull back on the spring loaded lock collars to release lock balls and slip clutch end over the splined shaft of the driveline. Install opposite end on tractor PTO output shaft. Be sure lock balls seat properly.
5. To operate this shredder, your tractor must have rear auxiliary hydraulics. Attach the rear hydraulics to the hydraulic cylinder on the shredder, making sure to loop your lines through the D-rings on the shredder so that they stay in place.
6. For best results, install a "belly pan" underneath the tractor to smash clippings down before running them into the shredder. Also, it is HIGHLY recommended that some sort of operator protection screen be added behind the seat of the operator to protect from thrown debris.

ATTENTION

Before operating the shredder under power, be sure to check the drive shaft through the entire lifting range to assure that there is no binding, bottoming, or uncoupling of the shaft connection.

Basic Operation

Starting Procedure

ATTENTION

Do not start the tractor until shredder has been carefully checked for correct assembly and installation. Be sure all observers are at least 100 feet clear of the machine.

1. Check to see that the shredder is in the down position and blades are not touching the ground. Start the engine. Set throttle at idle speed and slowly engage the PTO.

WARNING


Do not engage the PTO at a high engine speed. You may damage the shredder and possibly the tractor's PTO system.

Do not operate with tractors having 1000 RPM PTO speeds unless the shredder has been specifically designed to run at that speed. This high speed will damage the shredder and possibly cause injury.

2. Increase engine RPM to 540 PTO speed for a few minutes. Check for any excess vibration or loose parts.

IMPORTANT: If excess vibrations occur, disengage the tractor PTO shaft IMMEDIATELY. Shut off the tractor and determine and correct the cause of the problem. The rotor shaft has been electronically balanced to within 2 mils, which must be maintained throughout the life of the machine.

3. Shut off tractor engine, shut off PTO, put tractor in park, set parking brake and check PTO shaft, all bearings and gearbox for excess heat or oil leaks.

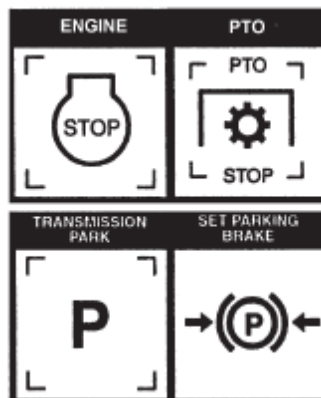

Basic Operation

Running Your Shredder

ATTENTION

The shredder should be run at a 540 RPM PTO speed unless it has been specifically designed to run at a higher PTO speed.

1. Ground speed should range anywhere from 0-7 miles per hour. However, the operator should drive at a speed he or she is comfortable with within this range.
2. The sides of the shredder should be 1/2" to 3" off of the ground. The sides are not made to run on the ground.
3. The shredder should be level with the ground while running.
4. The weight of the shredder should be on the rear wheels, which run on the ground.
5. Check adjustments section if you need to adjust the height of your shredder.



Shredder Parallel to Ground

Tines Scraping Ground

Adjustments and Maintenance

ATTENTION

Before doing any service work, observe the following safety rules:

1. Allow all movements to stop before leaving the operator's position to lubricate or clean the machine.
2. Before working on or underneath the mower, place blocks on both sides of the rear tractor tires and under each end of the mower to prevent accidental lowering of the machine.
3. Remove the ignition key from the tractor and allow all movements to stop before beginning work.

Lubrication

1. Grease Daily: Six bearings, universal joints and drive shaft slide tube.

CAUTION

Over-greasing seals and bearings can cause damage. If an excessive amount of grease comes out, too much grease has been applied.

2. Check gearbox oil level periodically and refill as required with quality 90 wt. gear oil. Be sure gearbox is in level position and remove side plug to fill.

CAUTION

Do not overfill gearbox. Seal ruptures can occur.

Lube Points: (may vary)


U-Joint Bearings



4 Rake Stop Bar Zerk Fittings

2 Top Shaft Bearings
(One on Each Side)

2 Top Shaft Bearing
(Behind Pulley, Each
Side)

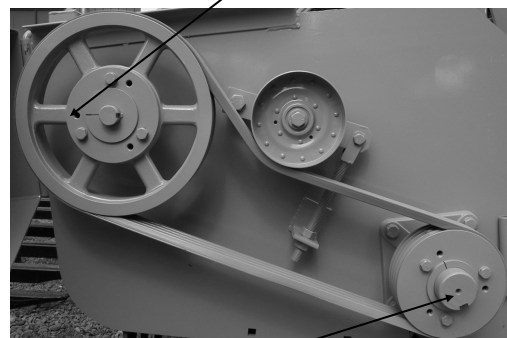

2 Main Cutter Drum Bearings
(One on each side behind
pulley)

Adjustments and Maintenance

Cutting Height and Belt Adjustment


1. The cutting height of the shredder can be adjusted from 0-8". Adjustment is done by simultaneously adjusting the hydraulic cylinder and the ratchet. The hydraulic cylinder adjusts the rear of the shredder and the ratchet adjusts the front. Once the correct height is reached and the shredder is parallel with the ground, place the "donuts" between the hydraulic cylinder and the lower mount and relieve the hydraulic pressure.



2. The weight of the shredder should be on the rear wheels and drawbar. The rakes should be adjusted to where they lightly scrape the surface of the ground. They are adjusted by turning the turnbuckles to raise or lower the rake stop bar. Adjust these turnbuckles after adjusting the cutting height.



3. Belt adjustment is done by tightening the idler adjusting rod which pulls the idler pulley into the belts. On a new machine, after 1-2 hours of operation, tighten the drive belts so there is only 1/4" to 3/8" give with 8 pounds of force.

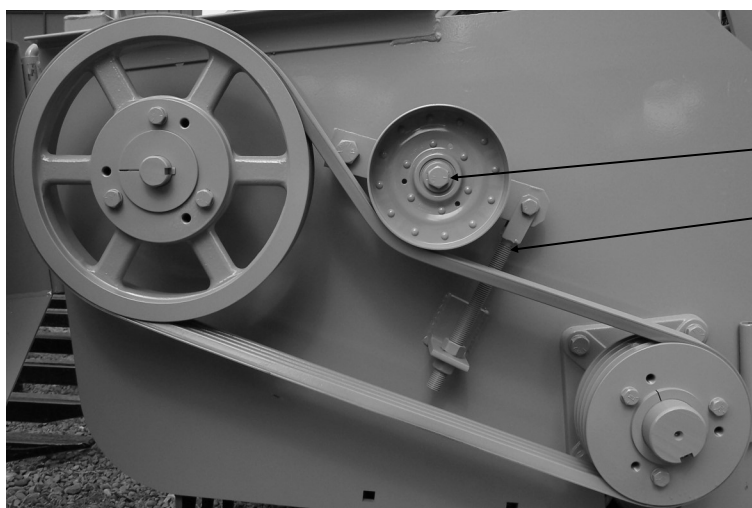


Idler Pulley

Idler Adjusting Rod


Adjustments and Maintenance

Replacing Knives

1. When knives, bolts or spacers become worn, they must be replaced. Not doing so could cause the cutting reel to run out of balance. **Do not mix new parts with older, worn parts. Doing so could cause the cutter drum to run out of balance.**
2. The knife replacement method for these attachments has been redesigned and now features a method that makes them easily removable while on the job. All you need is a 3/16" punch, a hammer and access to the knives on the cutter drum. Once the shredder is tilted to where the knives are exposed, simply take your punch and hammer it against the roll pin going through the castle nut and bolt until it pops out. The nut should come off easily after that.

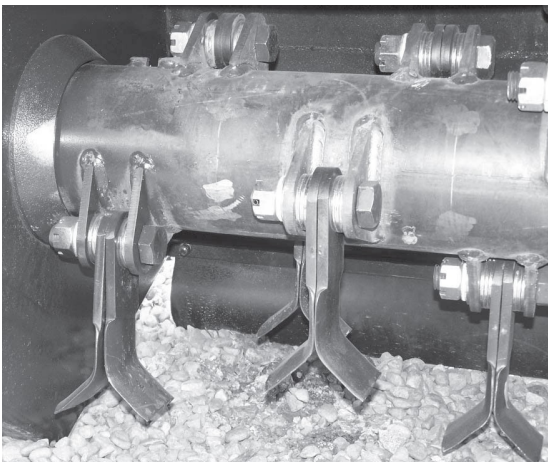

Shredder Knife

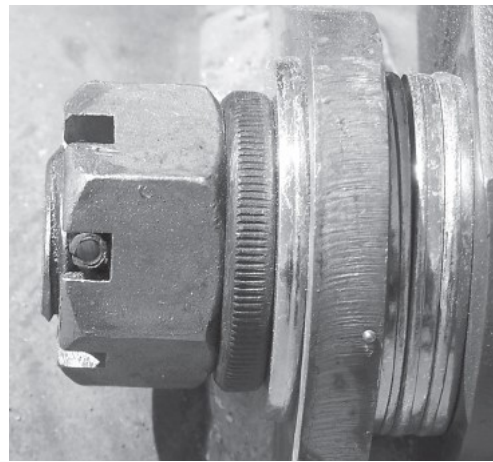

Castle Nut and Roll Pin

3. To attach new knives, replace the same as they were removed and tighten the nut down past the hole for the roll pin and reinsert the roll pin using the hammer and punch.

ATTENTION

Gloves should always be worn when handling or replacing knives to reduce the chance of injury.

Adjustments and Maintenance

Cleaning Your Shredder


ATTENTION

To preserve life of paint and decals, wash the shredder after each use. The preservation of your shredder's decals is essential to safety, so make sure they are kept in good condition.

It is recommended that some sort of degreasing solution be used on all bearings.


1. Check for excessive grease in bearing areas on the pulley sides of the shredder. Make sure that grease is not allowed to get into the belt areas.

Check bearing areas underneath pulleys and remove any caught clippings.

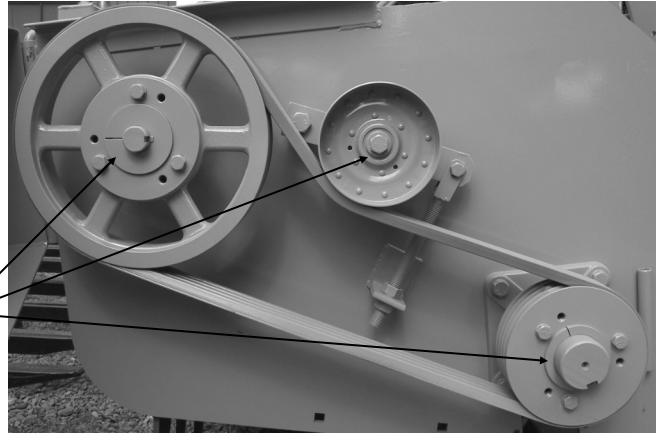

2. Clean any clippings from gearbox areas, pulley areas and anywhere else that is prone to excessive heat where fires can start.

Check gearbox area and under safety shields for clippings.

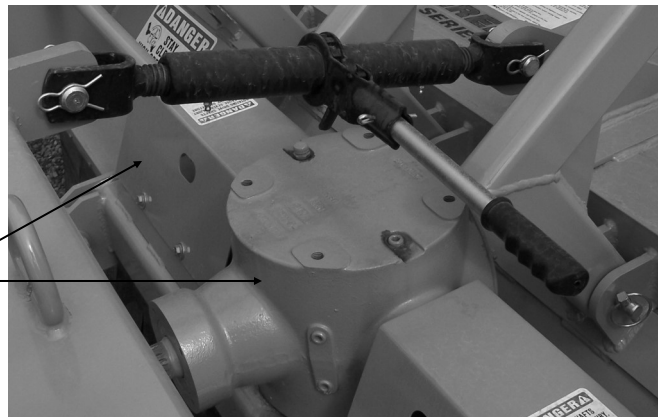

3. Clean the inside of the shredder with a pressure washer. Make sure the inside of the shredder is kept free from mud and compact grass. Keep in mind that mud built up on the cutter drum can cause imbalance.
4. Preserve damaged decals or replace them if they are unreadable. Decal kits can be obtained from your local Vrisimo dealer.

Transport, Removal and Storage

ATTENTION

To transport, disengage PTO lever before lifting shredder to the highest transport position. Raising the shredder while the PTO is engaged will cause the shaft to bind or even break and may cause injury to the operator.

Disengage PTO and shut off engine allowing all movement to stop before leaving the operator's position to adjust, lubricate, clean or unclog the machine. Before working on or underneath the mower/shredder, place blocks on both sides (front and rear) of tractor tires and under each end of the shredder to prevent accidental lowering of the machine. Also remove the ignition key from the tractor and allow all movement to stop before beginning work.

Removal

1. Disconnect the drive shaft from the tractor and shredder.
2. Lower the jack to desired height.
3. Disconnect the shredder drawbar from the tractor drawbar and pull tractor forward.


Storage

1. Put the drive shaft away in a clean, dry place.
2. Clean the shredder thoroughly.
3. Relax belt tension.
4. Lubricate the shredder as recommended.
5. Check oil level in gearbox and fill as required.
6. Check for worn parts and replace so you will be ready to work when necessary.
7. Store in a clean, dry place.

Frequently Asked Questions

Q. Where is the serial number for my machine?

R. The serial number for your shredder is stamped near you 900 Series decal on the top of the shredder..

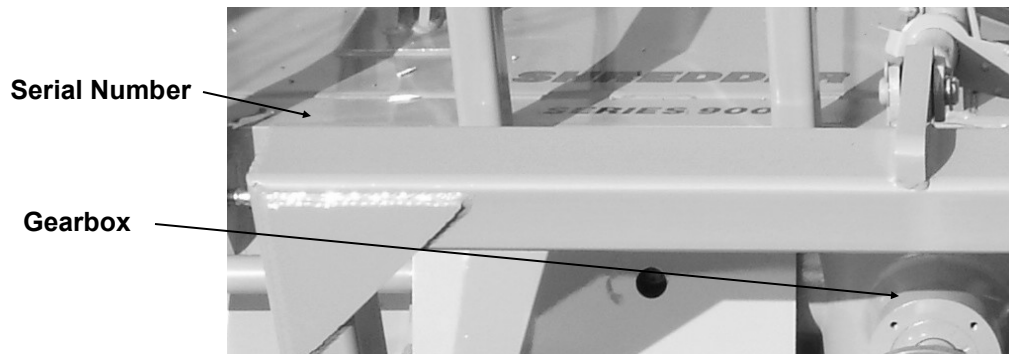

Q. Where do I find replacement parts?

R. First check your local tractor dealer and if they do not have parts, ask them to order from the Vrisimo factory.

Q. How often should I change my knives?

R. Replacing the cutting knives is entirely up to the owner. When the cut begins to be inconsistent or rough, consider replacing the knives. It is recommended to keep an extra set of knives on hand so that loss of work time is minimal.

Q. How often should I replace my belts?

R. If you are experiencing repeated slipping or breaking of belts, try adjusting the level of tension. If this does not remedy the problem, replace the belt. Consider having an extra belt on hand as well.

Q. Do I need to fill the gearbox with oil before I use the shredder?

R. No, the gearbox comes full with oil. Use 90 weight oil when replacing.

Q. What do I do if my belts are wearing out too fast or burning up?


R. First check belt tension. Belts should have about 3/8" sway in them. Adjust tension accordingly. If this does not help, check the height of the grass you are mowing. If the grass is over 2 feet tall, you might have to adjust mower cutting height upwards and slow the speed of your travel to reduce belt slippage.

Q. How can I prevent my PTO shaft from coming off during operation?

R. Be careful! Make sure the shaft is slid all the way on and the safety pin is in the locked position.

Frequently Asked Questions

- Q. When I am replacing gear oil, how much should I add?
R. When replacing gear oil, fill from the top fill hole and check oil level using the lower fitting on the side of the gearbox..

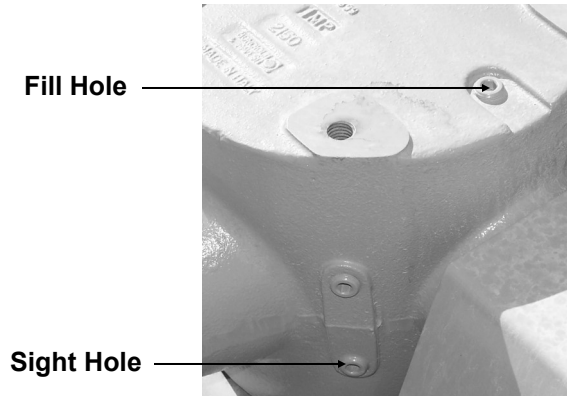

- Q. Are there any advantages to reversing cutter drum rotation?
R. Whether or not reversing cutter drum is advantageous depends on the application. In most mowers (excluding the Roadside), normal rotation is a reverse rotation. This means that the cutter drum rotates in a fashion that would throw grass or clippings towards the tractor. The only advantage to reversing rotation would be if you are mowing in industrial applications such as along freeways, in places with large amounts of debris (i.e. plastic, metal, rocks), or using a front mount application or a Roadside. There are typically no advantages as far as the grade of cut you will get, but rather safety advantages as stated above.
- Q. How do I reverse cutter drum rotation?
R. To reverse cutter drum rotation, un-mount the gearbox from its current position and rotate the gearbox so that you are switching the places of the output shafts of the gearbox. Install the safety covers and it is ready to go. Note: Scoop knives must be rotated to accommodate for a reversed cutter drum rotation.
- Q. How do I replace my knives?
R. Replacing the knives may vary depending on your model of mower/shredder. See the Adjustments/Maintenance section for detailed information.
- Q. When connecting my PTO shaft, can I put it on either way or should a specific side go to the mower/shredder and the other to the tractor?
R. The PTO shafts for these mowers/shredders are side specific. The tube half of the PTO shaft goes to the mower/shredder and the bar half of the PTO shaft goes to the tractor.

Parts Catalog




S-900 Shredder

S-900 Specifications

Model	Cutting Width	Overall Width	Appx. HP	Knives	Input PTO Speed
S-900-8	8'	9.58'	90	68	540
S-900-9	9'	10.58'	100	72	540


Model	Rear Height	Cutter Drum RPM	Brush Rakes	Appx. Shipping Weight
S-900-8	0-12"	1850	7	3350 lbs.
S-900-9	0-12"	1850	8	3515 lbs.

Top Shaft Assembly

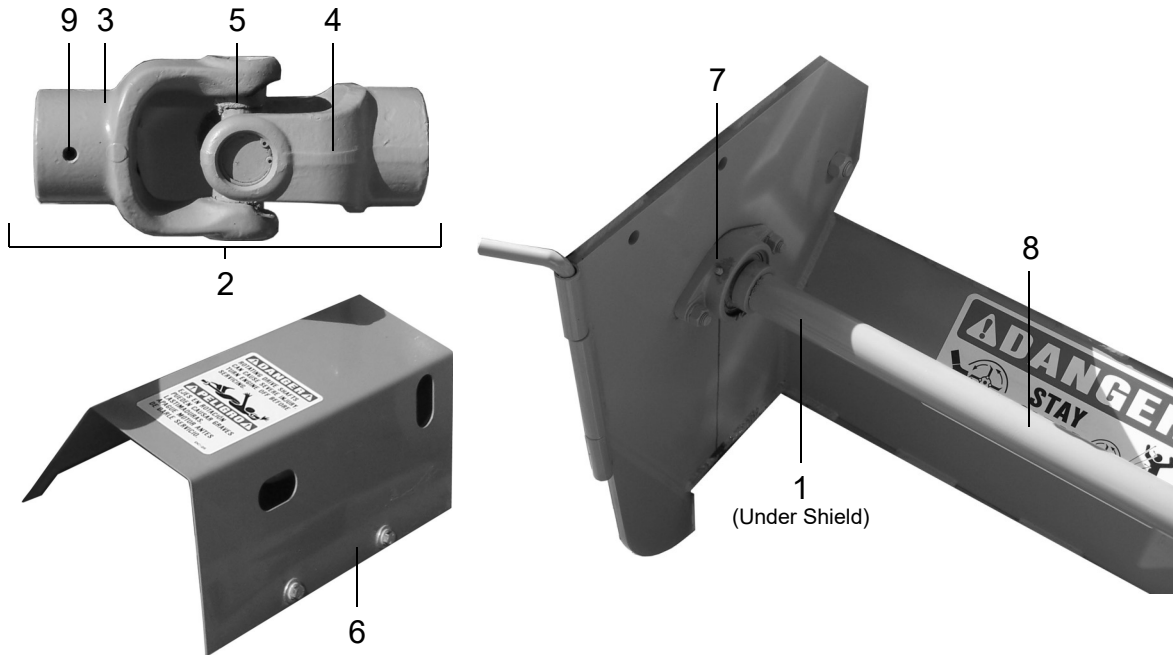


#	Description	Model	Part #	Qty.	Year
1	Top Shaft 1 3/8" x 42"	S-900-8	0218-VR-2	2	2005+
1	Top Shaft 1 3/8" x 48"	S-900-9	0219-VR-2	2	2005+
2	Complete Universal Assembly	All	TS-6001	2	2005+
3	Yoke 1 3/4" Round Bore, Keyed	All	TS-6005	2	2005+
4	Yoke 1 3/8" 21 Spline	All	TS-6004	2	2005+
5	Universal Cross Assembly	All	TS-6002	2	2005+
6	Safety Cover-Universal Assembly	All	0220-VR-3	2	2005+
7	Bearing Assembly 1 3/8" 2-Bolt	All	TS-1306	2	2005+
8	Top Shaft Safety Shield-Per ft.	All	TS-1199	A/R	2005+
9	Roll Pin, Universal to Top Shaft	All	DS-2224	2	2005+
10	Key 3/8" x 2" Universal End (not shown)	All	TS-1194	2	2005+
11	Key 5/16" x 2" Pulley End (not shown)	All	TS-1179	2	2005+
	Gear Box		BP-2150		

Drive Pulley Assembly

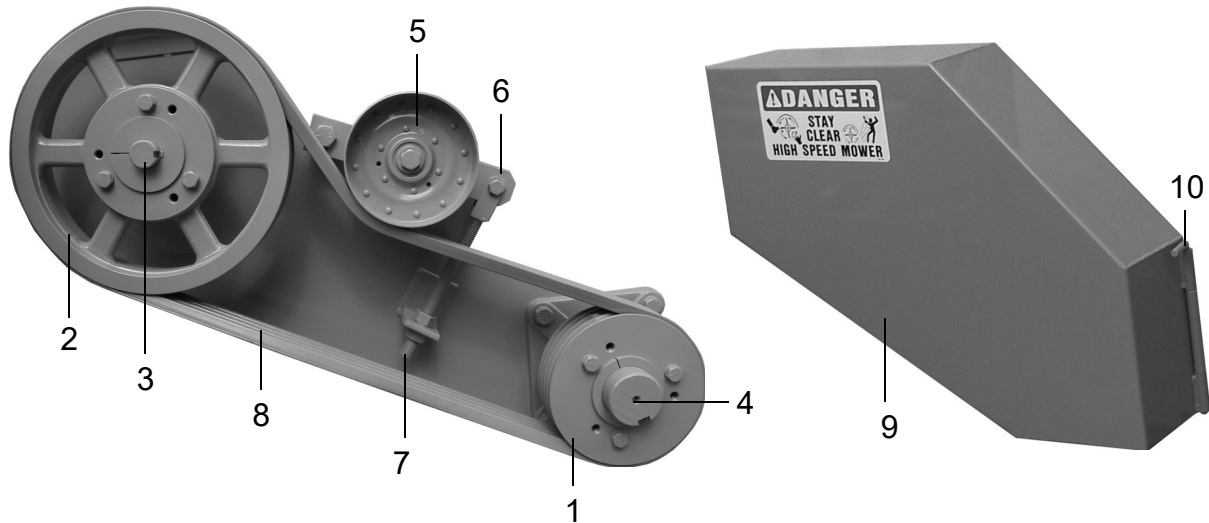

#	Description	Model	Part #	Qty.	Year
1	Lower Pulley, 4 Groove	All	P-800	2	2005+
2	Upper Pulley, 4 Groove	All	P-1495	2	2005+
3	Retainer Bushing, Top 1 3/8" ID	All	TL-1542	2	2005+
4	Retainer Bushing, Bottom 2 3/4" ID	All	TL-1547	2	2005+
5	Idler Pulley	All	IP-1641	2	2005+
6	Idler Arm	All	IP-1654	2	2005+
7	Idler Arm Adjusting Rod	All	IP-1653A	2	2005+
8	Drive Belt	All	B-1795A	2	2005+
9	Drive Belt Cover-Right	All	0222-VR-3	1	2005+
9	Drive Belt Cover-Left (not pictured)	All	0221-VR-3	1	2005+
10	Cover Pin	All	DP-1005	4	2005+

Cutter Drum Assembly

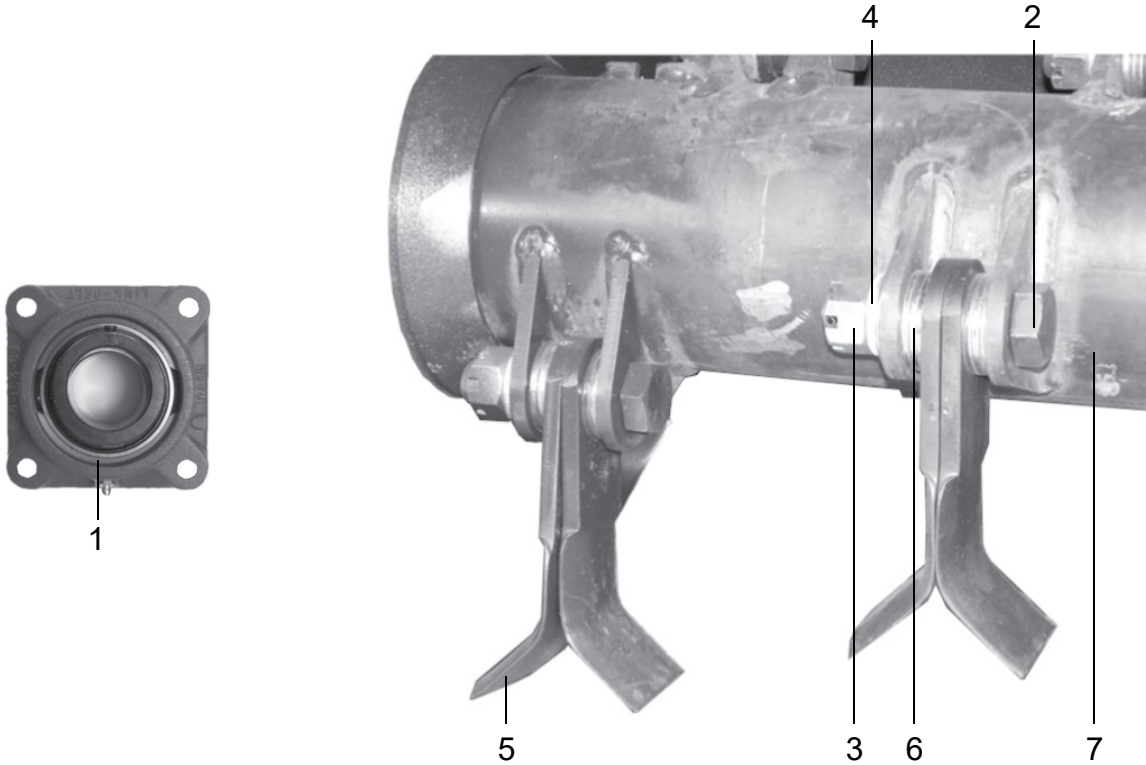

#	Description	Model	Part #	Qty.	Year
*1	Bearing Assembly 3" 4 Bolt	All	CD-1840	2	2005 - 2008
1	Bearing Assembly 2 15/16" 4 Bolt	All	CD-2900	2	2009+
2	Bolt, Hammer Hanging	All	CD-40EX-30	A/R	2005+
3	Castle Nut with Roll Pin	All	CD-40EX-34/35	A/R	2005+
4	Heavy Lock Washer	All	CD-40EX-33	A/R	2005+
5	Knife-Heat Treated	All	CD-2500	A/R	2005+
6	Spacer	All	CD-40EX-32	A/R	2005+
7	Cutter Drum-8'	S-900-8	0223-VR-4	1	2005+
7	Cutter Drum 9'	S-900-9	0224-VR-4	1	2005+


Center Blade Option? (2012 Triple Knives are standard)

*05—06 Production used

07-08 Production used—CD-1840

09- Current—Production uses 2-15/16" —CD-2900

Rear Wheel Assembly

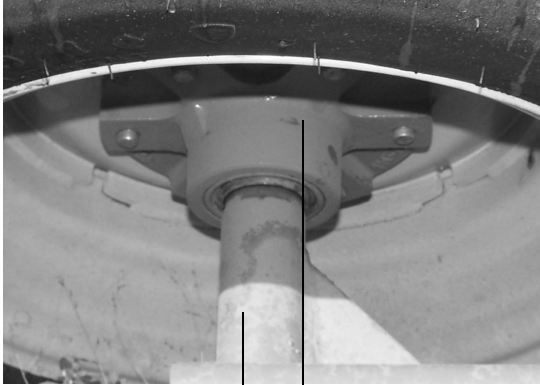


1 2



3

#	Description	Model	Part #	Qty.	Year
1	Spindle 1 3/4" x 12.5" 6 on 6	All	RW-2410	4	2005+
2	Hub Assembly 6 on 6	All	RW-2420	4	2005+
3	Tire and Wheel	All	RW-3010	4	2005+

Miscellaneous

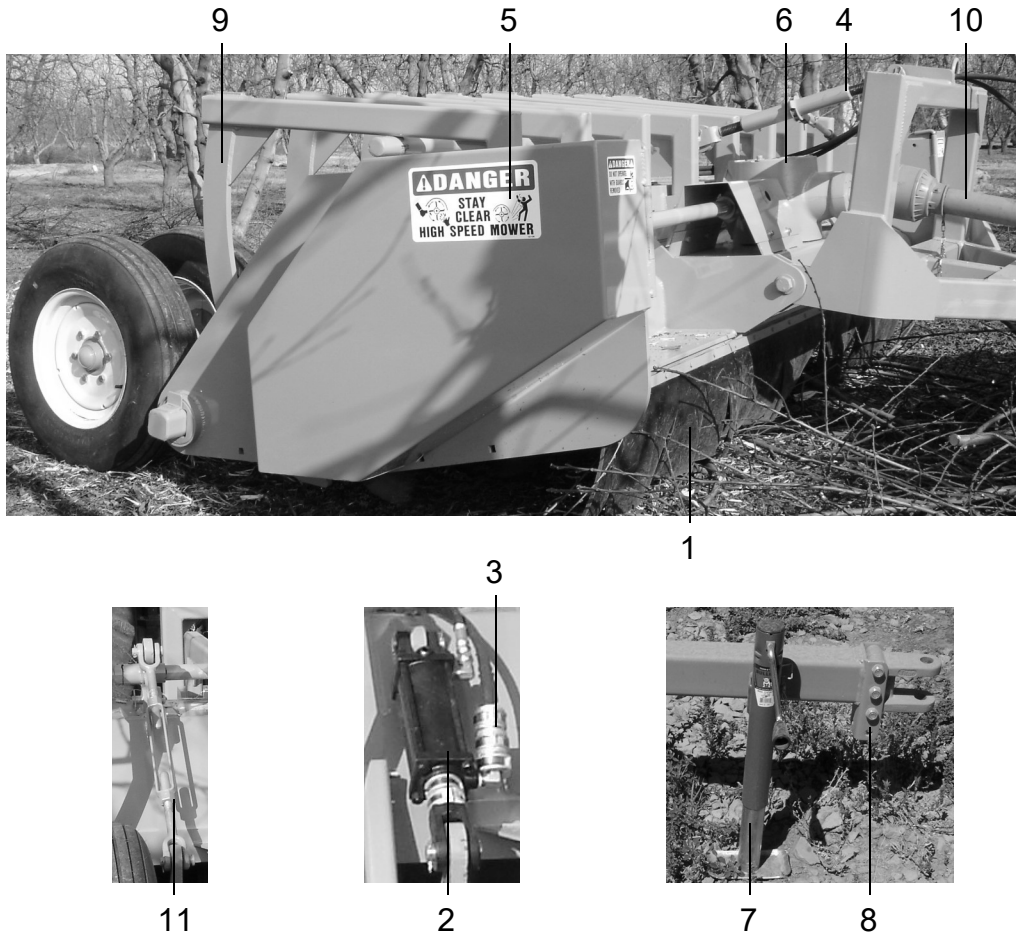

#	Description	Model	Part #	Qty.	Year
1	Front Rubber Guard	All	RB-900-8/9	1	2005+
2	Cylinder 3" x 6"	All	RW-2380B	1	2005+
3	1.25" Cylinder Rod Stop Kit (Donut)	All	RW-2381	1	2005+
4	Ratchet Jack	All	RW-2399	1	2005+
5	Decal Set	All	DC-S900	1	2005+
6	Gearbox Assembly	All	BP-2150	1	2005+
7	Jack 2000#	All	06-179	1	2005+
8	Channel	All	06-266	1	2005+
9	Floating Rake Tine	All	FR-3501	A/R	2005+
10	Complete PTO Shaft Assembly	All	DS-6050	1	2005+
11	Turnbuckle	All	RW-2401	2	2005+
12	Liner, 85-3/4" (not pictured)	S-900-7	WP-900-7A	1	2005+
12	Liner, 97-3/4" (not pictured)	S-900-8	WP-900-8A	1	2005+
12	Liner, 109-3/4" (not pictured)	S-900-9	WP-900-9A	1	2005+



Prices are subject to change without notice. Some parts may require different lengths for model specific applications.

Parts Order Form-900 Series

Purchase Order Number _____

Dealership Name _____

Ship to Address _____

Contact Person _____

Telephone # _____ Fax # _____

<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
B-1795A	Banded Belt, 4 Groove	_____
C-193	1 15/16" Shaft Collar	_____
CD-2500C	Center Blade	_____
P-1495	Upper Pulley, 4 Groove	_____
P-792	Clevis Pin	_____
P-800	Lower Pulley, 4 Groove	_____
P1013	Pin 3/4" x 3 3/4"	_____
RB-900-8	Front Rubber Guard (Model Specific)	_____
RW-2380B	Cylinder 3" x 6"	_____
RW-2381	1.25" Cylinder Rod Stop Kit	_____
TL-1547	Retainer Bushing 2.75"	_____
TS-6001	Universal 1 3/8" Rd. Bore	_____
RW-2410	Spindle 1.75" x 12.5" 6 on 6	_____
FR-3501	Floating Rake Tine	_____
RW-2420	Hub Assembly 6 on 6	_____
RW-2399	Ratchet Jack	_____
DC-S900	Decal Set	_____
P-791	Click Pin	_____
IP-1641	Idler Pulley	_____
CD-2150	Heavy Link	_____
CD-2500	Shredder Knife	_____
CD-40EX-30	Bolt, Gr. 8, 3/8-16NC x 4", 3/1	_____
CD-40EX-32	Knife Blade Spacer	_____
CD-40EX-33	Lock Washer, 1"	_____
CD-40EX-34	Castle Nut, Gr. 8, 1"-8NC	_____
CD-40EX-35	Roll Pin, 3/16" x 1.5"	_____
TL-1542	Retainer 1 3/8"	_____
BP-2150	Gearbox Assembly	_____
CD-1840	Bearing Assembly 3" 4-Bolt	_____
TS-1306	Bearing, 1 3/8" 2 Bolt Flange	_____
06-179	Jack 2000#	_____
06-266	Channel	_____
06-267	1" Clevis Adj. Coupler	_____
SMV1FP-C	Slow Moving Decal	_____
RW-3010	Tire and Wheel 7.60 x 15 6x6 8PL	_____
0218-VR-2	Top Shaft, 1 3/8" x 42"	_____
0219-VR-2	Top Shaft, 1 3/8" x 48"	_____
0220-VR-3	Universal Assembly Safety Cover	_____
0221-VR-3	Belt Guard, Left	_____
0222-VR-3	Belt Guard, Right	_____
0223-VR-4	Cutter Drum, S-900-8	_____
0224-VR-4	Cutter Drum, S-900-9	_____

Fax this completed form to (209) 882-9001

**Vrisimo Equipment
P.O. Box 220-2507 Tully Rd.
Hughson, CA 95326
Phone: (800) 426-5615 Fax: (209) 882-9001**