
## BRUSHHOUND FHX86 MOTOR SETUP




MOTOR	45T	43T	
DRUM	43T	45T	
GPM	29-37	38-47	
RATIO	1.116	0.896	


CHECK PULLEYS / SHEAVES. SWAP TO TO MATCH GPM AS REQUIRED

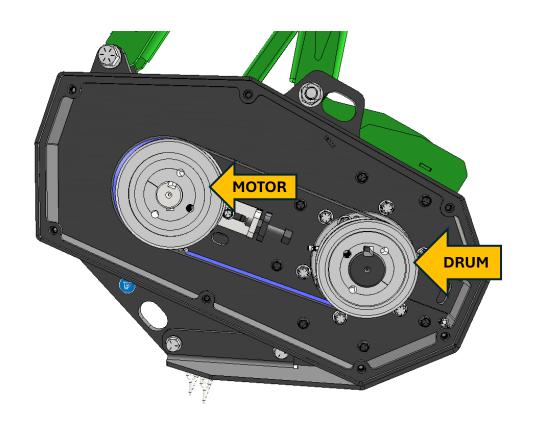

## ADJUST MOTOR Vmin MIN DISPLACEMENT HIGH SPEED SETTING Vmax MAX DISPLACEMENT MINIMUM SPEED / HIGH TORQUE

SELECT	GPM	VMIN	RPM	VMAX	RPM	RATIO:1	_
JEELE!	27	50	2281	60	1901	1.116	
	28	55	2151	65	1820	1.116	
	29	55	2227	70	1750	1.116	
	30	60	2112	70	1811	1.116	
	31	60	2183	75	1746	1.116	
	32	60	2253	75	1802	1.116	
	33	65	2145	85.2	1636	1.116	
	34	65	2210	85.2	1686	1.116	
	35	65	2275	85.2	1735	1.116	
	36	70	2173	85.2	1785	1.116	
	37	70	2233	85.2	1835	1.116	
	38	60	2148	70	1841	0.896	
	39	60	2205	70	1890	0.896	
	40	60	2261	75	1809	0.896	
	41	65	2139	75	1854	0.896	
	42	65	2192	80	1781	0.896	
	43	65	2244	80	1823	0.896	
	44	70	2132	85.2	1752	0.896	
	45	70	2180	85.2	1791	0.896	
	46	70	2229	85.2	1831	0.896	
	47	70	2277	85.2	1871	0.896	
					5	0.000	

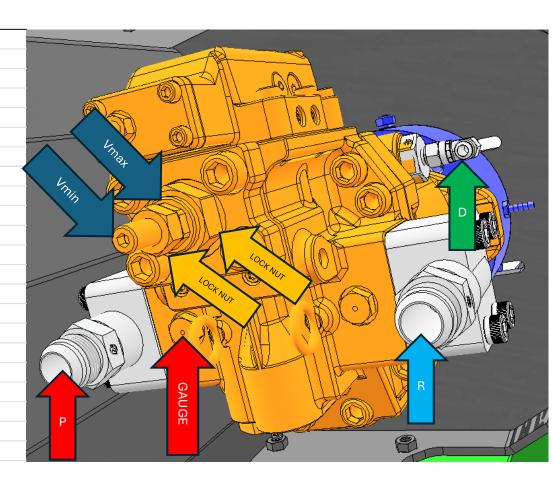

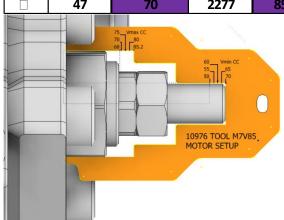

USE 10976 TOOL